
INSTALLATION INSTRUCTIONS

NAC25H E1/G1/S1 Racks Casters

The NAC25H casters are designed for use with Chief® E1, G1 or S1 Series racks. See the specific installation instructions provided with the rack for additional installation information.

TOOLS REQUIRED / PARTS INCLUDED

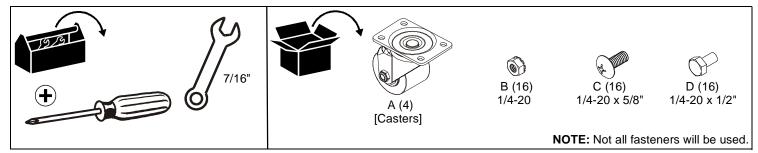

WARNING: FAILURE TO READ, THOROUGHLY UNDERSTAND, AND FOLLOW ALL INSTRUCTIONS CAN RESULT IN SERIOUS PERSONAL INJURY, DAMAGE TO EQUIPMENT, OR VOIDING OF FACTORY WARRANTY! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

NOTE: Casters may be installed using a torque wrench, and torque not to exceed 5 ft-lbs.

E1/G1 Racks Caster Installation

 Attach a caster (A) to each lower corner of the E1 rack using four 1/4-20 x 5/8" Phillips truss head machine screws (C) [OR four 1/4-20 x 1/2" hex head cap screws (D)] and four 1/4-20 lock nuts (B) for each caster. (See Figure 1)

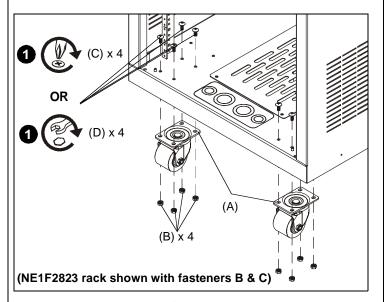


Figure 1

NOTE: If levelers are already installed in the rack, leave levelers installed and adjust them using a 13mm wrench so they are as close to the floor as possible, yet still allow movement of the rack on the casters.

S1 Racks Caster Installation

 Attach a caster (A) to each lower corner of the S1 rack using four 1/4-20 x 1/2" hex head cap screws (D) [OR four 1/4-20 x 5/8" Phillips truss head machine screws (C)] for each caster. (See Figure 2)

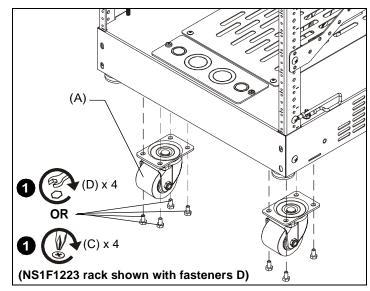


Figure 2

NOTE: If levelers are already installed in the rack, leave levelers installed and adjust them using a 13mm wrench so they are as close to the floor as possible, yet still allow movement of the rack on the casters.

®Chief is a registered trademark of Milestone AV Technologies. All rights reserved.

Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

