

INSTALLATION INSTRUCTIONS

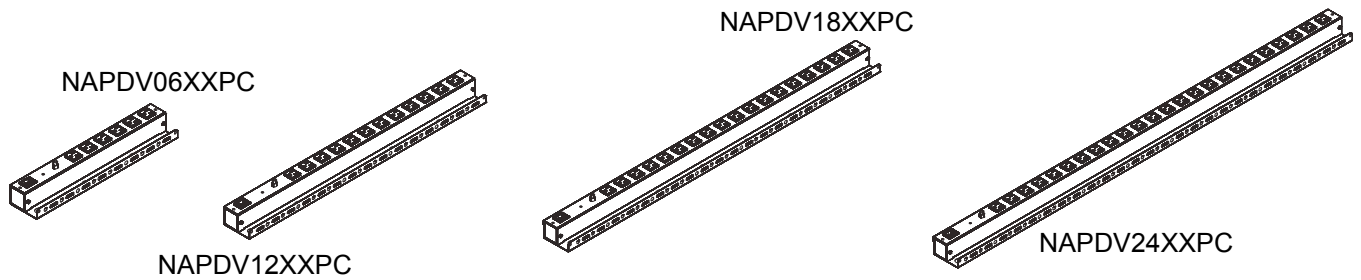

NAPDV Power Strips

DISCLAIMER

Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



IMPORTANT SAFETY INSTRUCTIONS



DANGER alerts you to the certainty of death or serious injury if you do not follow the instructions.



WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



WARNING: FAILURE TO READ AND FOLLOW THE FOLLOWING INSTRUCTIONS CAN RESULT IN SERIOUS PERSONAL INJURY, DAMAGE TO EQUIPMENT OR VOIDING OF FACTORY WARRANTY. It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!!!!



DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:

1. Use only in dry locations indoors.
2. Do not plug into another power tap or power distribution unit.
3. The input plug of this power tap is intended to serve as the disconnect device, it shall be easily accessible.



CAUTION Avoid potential personal injuries and property damage!

1. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (0-40°C/32-104°F) specified by the manufacturer.
2. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
3. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
4. Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).
5. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.


NOTE: This system has no user serviceable parts.

--SAVE THESE INSTRUCTIONS--

DIMENSIONS/SPECIFICATIONS


NAPDVXX15PC

MODEL	CURRENT	NUMBER OF OUTLETS	"A" LENGTH
NAPDV0615PC	12 AMP	6	17.00 [431.8]
NAPDV1215PC	12 AMP	12	30.00 [762.0]
NAPDV1815PC	12 AMP	18	41.00 [1041.4]
NAPDV2415PC	12 AMP	24	52.25 [1327.2]

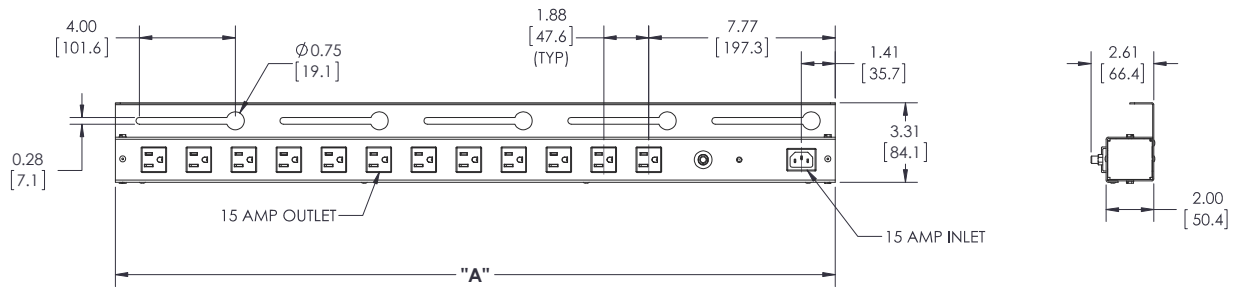

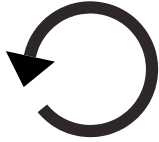






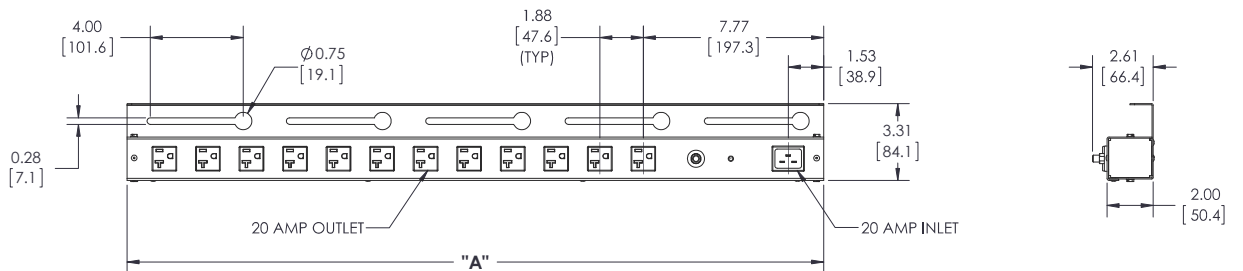

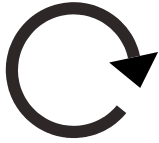


NAPDVXX20PC


MODEL	CURRENT	NUMBER OF OUTLETS	"A" LENGTH
NAPDV0620PC	16 AMP	6	17.00 [431.8]
NAPDV1220PC	16 AMP	12	30.00 [762.0]
NAPDV1820PC	16 AMP	18	41.00 [1041.4]
NAPDV2420PC	16 AMP	24	52.25 [1327.2]




LEGEND

	<p>Tighten Fastener</p> <p>Apretar elemento de fijación</p> <p>Befestigungsteil festziehen</p> <p>Apertar fixador</p> <p>Serrare il fissaggio</p> <p>Bevestiging vastdraaien</p> <p>Serrez les fixations</p>		<p>Pencil Mark</p> <p>Marcar con lápiz</p> <p>Stiftmarkierung</p> <p>Marcar com lápis</p> <p>Segno a matita</p> <p>Potloodmerkten</p> <p>Marquage au crayon</p>
	<p>Loosen Fastener</p> <p>Aflojar elemento de fijación</p> <p>Befestigungsteil lösen</p> <p>Desapertar fixador</p> <p>Allentare il fissaggio</p> <p>Bevestiging losdraaien</p> <p>Desserrez les fixations</p>		<p>Drill Hole</p> <p>Perforar</p> <p>Bohrloch</p> <p>Fazer furo</p> <p>Praticare un foro</p> <p>Gat boren</p> <p>Percez un trou</p>
	<p>Phillips Screwdriver</p> <p>Destornillador Phillips</p> <p>Kreuzschlitzschraubendreher</p> <p>Chave de fendas Phillips</p> <p>Cacciavite a stella</p> <p>Kruiskopschroevendraaier</p> <p>Tournevis à pointe cruciforme</p>		<p>Adjust</p> <p>Ajustar</p> <p>Einstellen</p> <p>Ajustar</p> <p>Regolare</p> <p>Afstellen</p> <p>Ajuster</p>
	<p>Open-Ended Wrench</p> <p>Llave de boca</p> <p>Gabelschlüssel</p> <p>Chave de bocas</p> <p>Chiave a punte aperte</p> <p>Steeksleutel</p> <p>Clé à fourche</p>		<p>Remove</p> <p>Quitar</p> <p>Entfernen</p> <p>Remover</p> <p>Rimuovere</p> <p>Verwijderen</p> <p>Retirez</p>
	<p>By Hand</p> <p>A mano</p> <p>Von Hand</p> <p>Com a mão</p> <p>A mano</p> <p>Met de hand</p> <p>À la main</p>		<p>Optional</p> <p>Opcional</p> <p>Optional</p> <p>Opcional</p> <p>Opzionale</p> <p>Optie</p> <p>En option</p>
	<p>Hex-Head Wrench</p> <p>Llave de cabeza hexagonal</p> <p>Sechskantschlüssel</p> <p>Chave de cabeça sextavada</p> <p>Chiave esagonale</p> <p>Zeskantsleutel</p> <p>Clé à tête hexagonale</p>		<p>Security Wrench</p> <p>Llave de seguridad</p> <p>Sicherheitsschlüssel</p> <p>Chave de segurança</p> <p>Chiave di sicurezza</p> <p>Veiligheidsleutel</p> <p>Clé de sécurité</p>

TOOLS REQUIRED FOR INSTALLATION

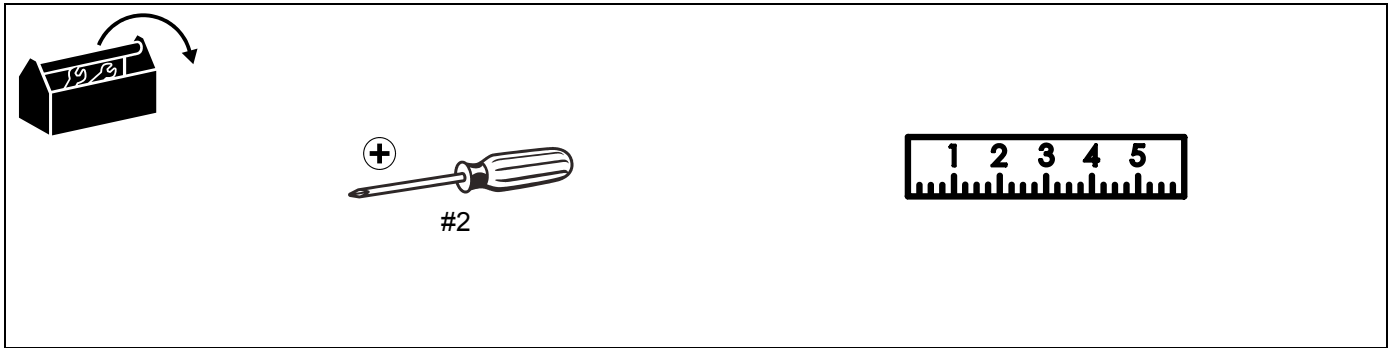

PARTS

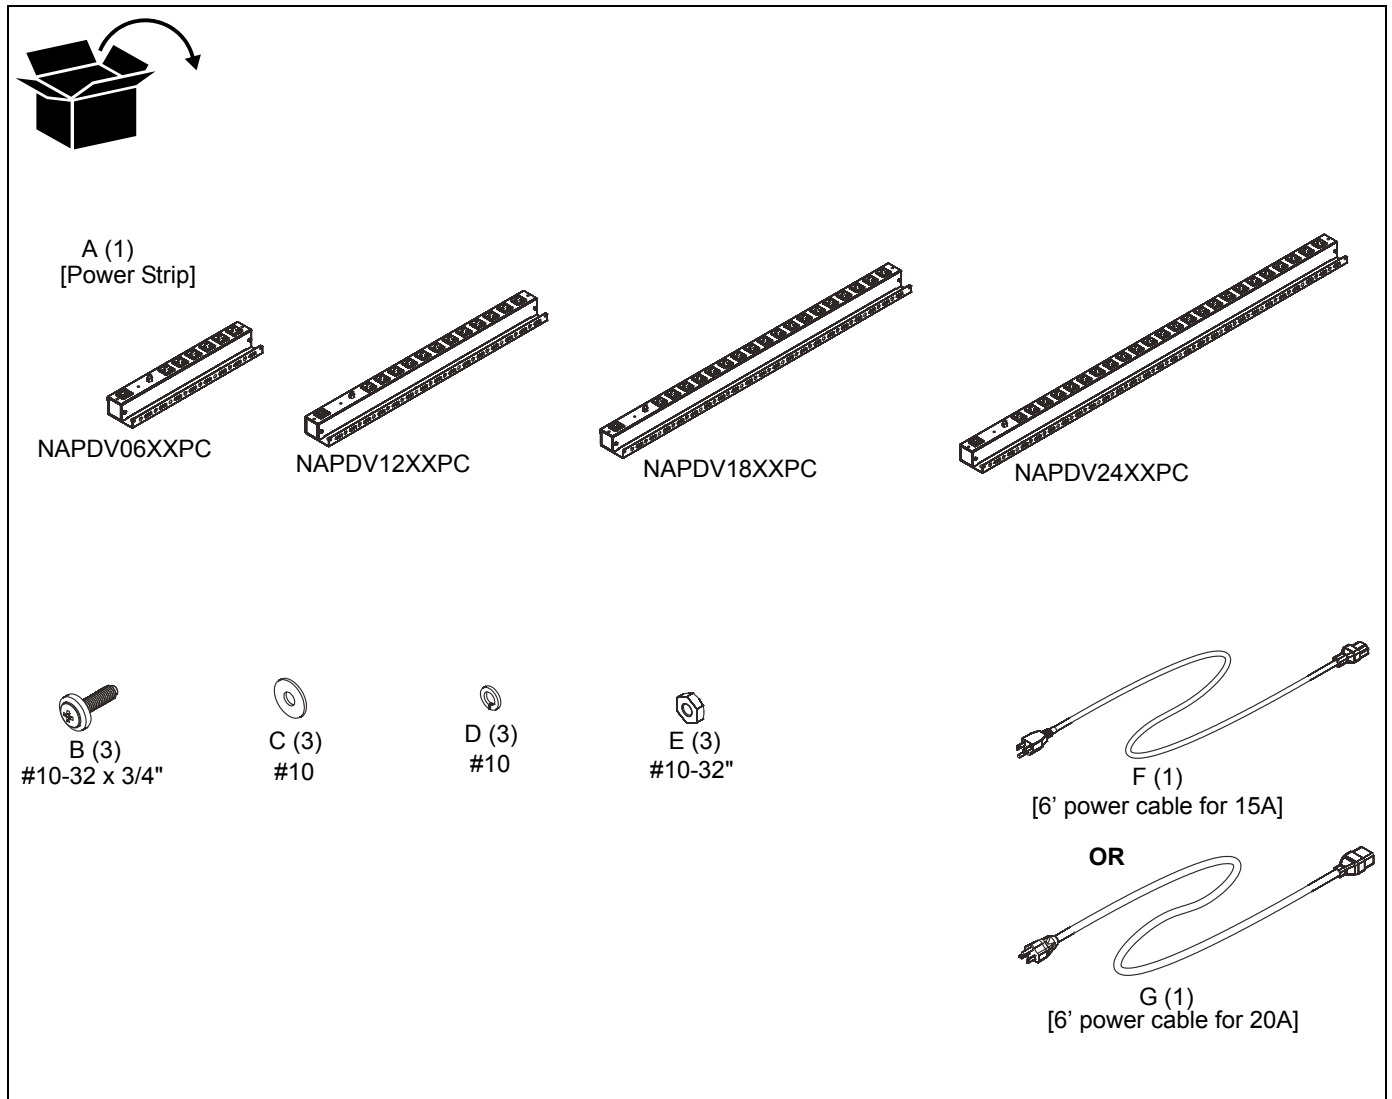

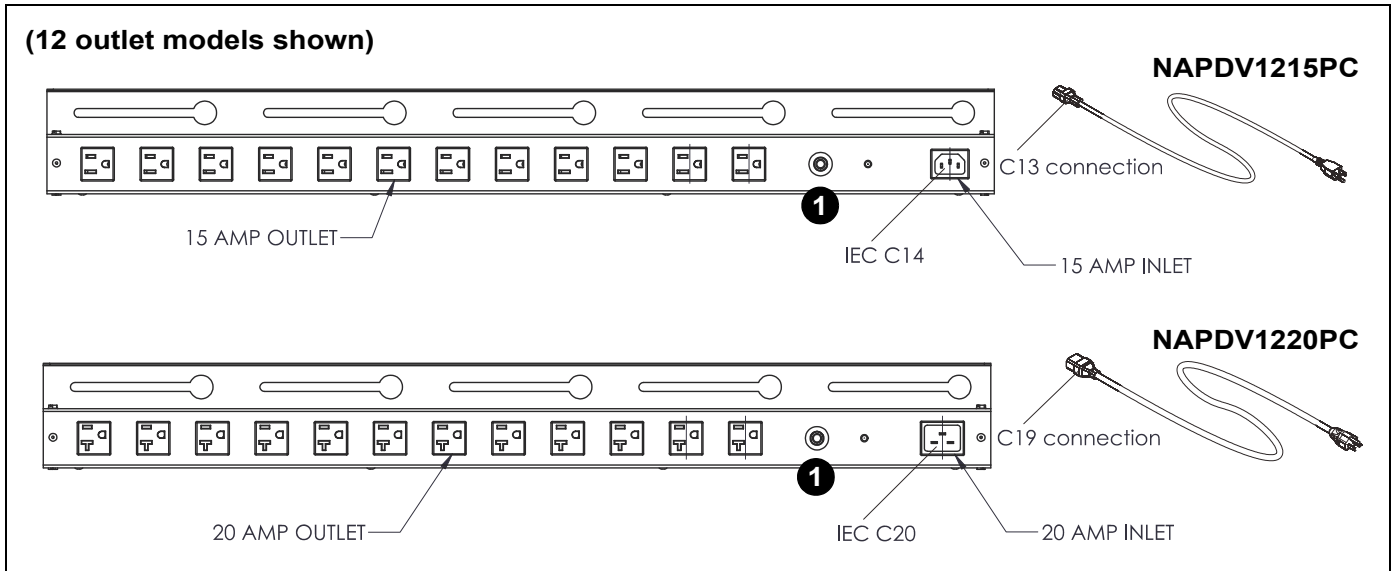


Figure 1

Power Strip Features

- 1. **Reset Switch:** Resettable circuit breaker.

SPECIFICATIONS

Table 1-1: UL Electrical Ratings

	Max load	VAC	Hz	power output
15A models	12A	125	60	1500W
20A models	16A	125	60	2000W

Input Connection:

- IEC C14 for the 15A models.
- IEC C20 for the 20A models.

6' supplied cord connections:

- IEC C13 (straight plug) to NEMA5-15P (straight plug) for the 15A models.
- IEC C19 (straight plug) to NEMA5-20P (straight plug) for the 20A models.

Outlets:

- 6, 12, 18 or 24 x NEMA-15R Receptacles for the 15A models.
- 6, 12, 18 or 24 x NEMA-20R Receptacles for the 20A models.

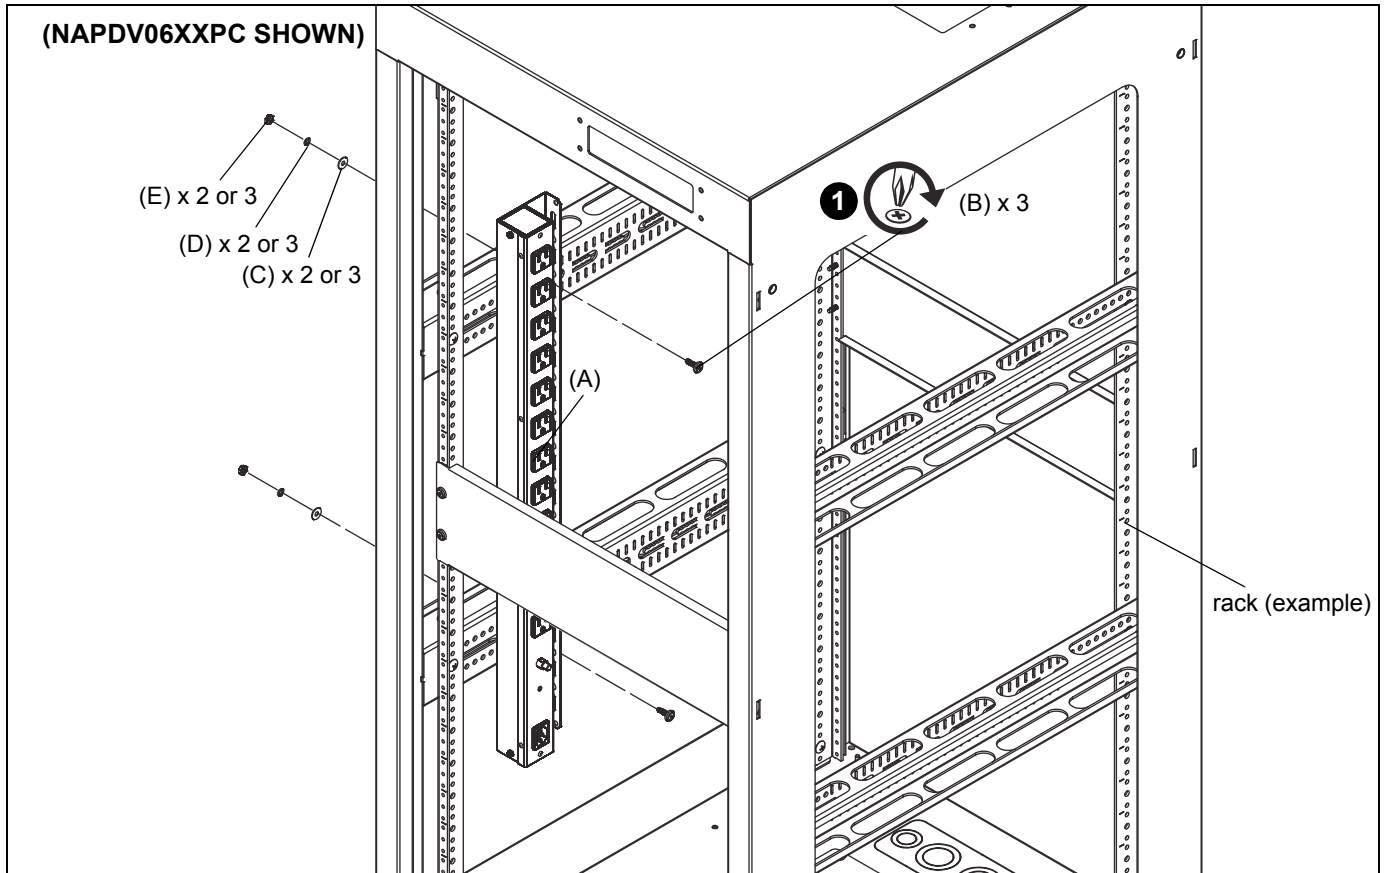


Figure 2

Installation to Rack

1. Use two or three #10-32 x 3/4" Phillips screws (B), #10 washers, #10 lock washers (D) and #10-32 lock nuts (E) to secure power strip (A) to rack. (See Figure 2)

NOTE: Quantity of hardware used in Step 1 will depend on the mounting application and the number of mounting holes available.

2. Connect power strip cables.



Our Mounts. **Your Vision.**

Chief, a products division of
Milestone AV Technologies

8800-002702 Rev00
©2015 Milestone AV Technologies
www.chiefmfg.com
08/15

USA/International	A 6436 City West Parkway, Eden Prairie, MN 55344
	P 800.582.6480 / 952.225.6000
	F 877.894.6918 / 952.894.6918
Europe	A Franklinstraat 14, 6003 DK Weert, Netherlands
	P +31 (0) 495 580 852
	F +31 (0) 495 580 845
Asia Pacific	A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong
	P 852 2145 4099
	F 852 2145 4477

